



Podešavanja ASUS AAM6010EV-T4

Otvorite *Internet Explorer* ili neki drugi web browser i ukucajte adresu <http://192.168.1.1>. Nakon učitavanja stranice sa slike, ukucajte **Admin** za *Username*, i **Admin** za *Password* polje. Kada upišete username i password, kliknite na dugme *Log in*.

Nakon uspešnog logovanja dobijate glavni ekran na kome je ispisan status uređaja. U meniju na vrhu stranice odaberite opciju *Setup*. Nakon prelaska u meni *Setup*, u meniju sa leve strane odaberite opciju *New Connection*.

U polje *Name* upišite naziv konekcije (ovo je bitno jedino ADSL uređaju, možete upisati tekst koji želite, u našim primerima je to tekst **Gama**). Iz polja *Type* odaberite opciju **Bridge**.

U koloni *PVC Settings* nadjite polja *VPI* i *VCI*. U polje *VPI* upišite **8**, a u polje *VCI* upišite **35**.

Kada završite sa podešavanjem parametara, kliknite na dugme *Apply*.

Nakon podešavanja, iz glavnog menija odaberite opciju *Tools*, a nakon toga iz menija sa leve strane odaberite opciju *System Commands*. Nakog toga kliknite na dugme *Save All* i sačekajte da se snime podešavanja uređaja. Kliknite na dugme *Restart* i sačekajte da se uređaj restartuje. Nakon restarta, uređaj će automatski uspostaviti vezu.

ADSL Modem	HOME	SETUP	ADVANCED	TOOLS	STATUS	HELP	
System Commands	System Commands						
Remote Log	System Commands allow you to carry out basic system actions. Press the button to execute a command.						
User Management							
Update Gateway							
Ping Test							
Modem Test							
Log Out							
	<div style="text-align: center;"><p>Save All</p><p>Press this button in order to permanently save the current configuration of the Gateway. If you do restart the system without saving your configuration, the Gateway will revert back to the previously saved configuration.</p><p>Restart</p><p>Use this button to restart the system. If you have not saved your configurations, the Gateway will revert back to the previously saved configuration upon restarting. NOTE: Connectivity to the unit will be lost. You can reconnect after the unit reboots.</p><p>Restore Defaults</p><p>Use this button to restore factory default configuration. NOTE: Connectivity to the unit will be lost. You can reconnect after the unit reboots.</p></div>						